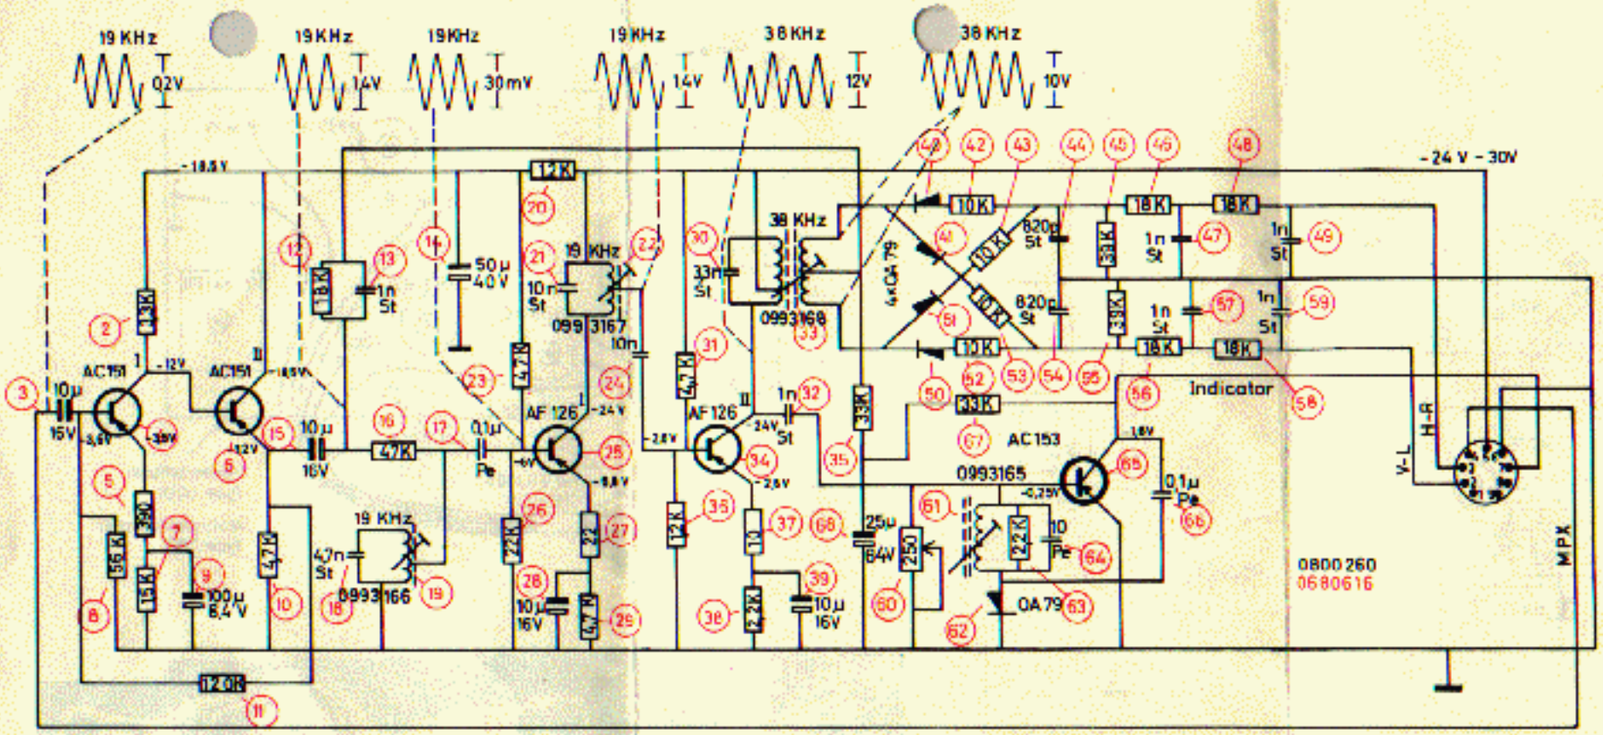

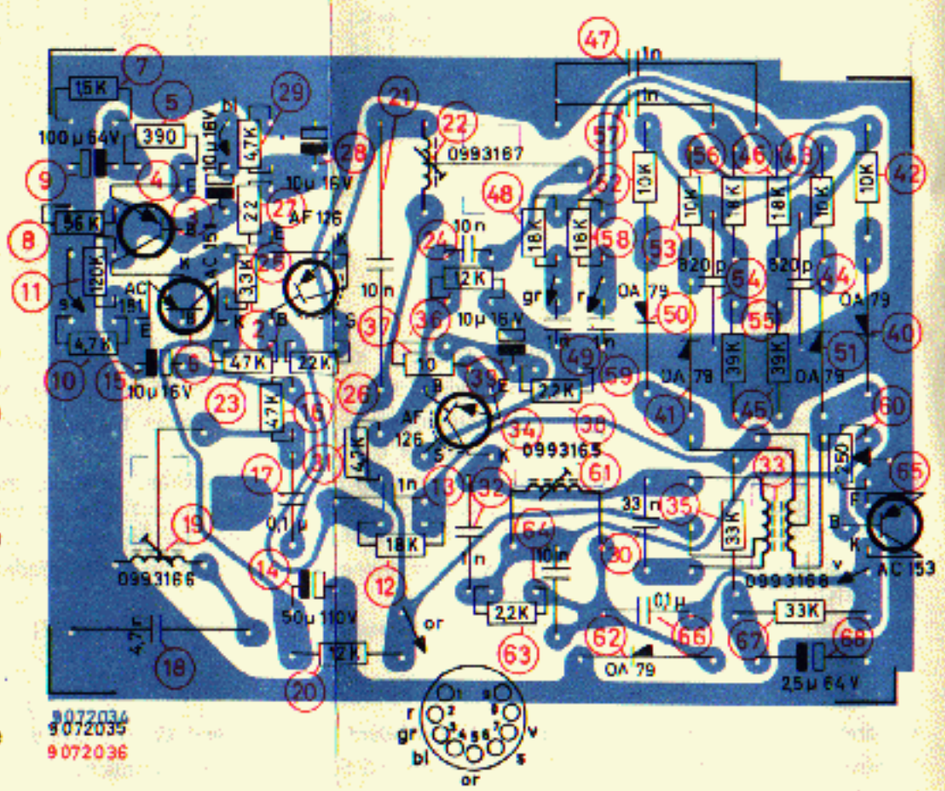

Vinklen (0760472) for fastspænding af stereodekoderen type: 0001 (900 H 204) i Beomaster 1000, loddes fast på PW-pladen, i PW-pladens 2 frie huller på 2×5 mm.

Kølefinnen på indicatortransistoren AC 153 skal tages af og vendes 180 gr. inden den skrues fast på vinklen, med en skrue (2038007) og en spændeskive (0286135) se tegning.

Forforstærkeren type: 0002 (hvis en sådan er monteret) skrues af, og „skydes" fri af chassiset.

Modbetoningsproppen (994 L 27), som sidder i stereodekoderfatningen (ved siden af skalasvinghjulet), fjernes.

Ledn. pølsen med stikproppen fra stereodekoderen, trækkes fra dekoderens plads ind under skinnen, (for fastspænding af PW-pladerne) frem til stereodekoderfatningen og stikket sættes i fatningen.

Dekoderen „skydes" derefter på plads og skrues fast med en skrue (2038007) og en fiberskive (0376369).

Ved montering i Beomaster 1000 udelades: 1 selvskærende skrue (2012900).

Solder bracket 0760472 (for mounting the type 0001 (900 H 204) Stereo Decoder in the Beomaster 1000) on to the PW board, in the two free 2×5 mm holes of the PW board.

The cooling fin of the indicator transistor, AC 153, is to be removed and turned over 180 degrees before being schrewed on to the bracket, using a screw (2038007) and a washer (0286135); see drawing.

Unscrew the type 0002 Pre-amplifier (if provided) and slide it clear of the chassis.

Remove the de-emphasis plug (994 L 27) from the Stereo Decoder connector socket (adjacent to the dial drive flywheel).

Pull the plug-terminated wiring harness coming from the Stereo Decoder out from the place intended for the Decoder; then pull it in below the PW-board mounting strip out to the Stereo Decoder connector socket and insert the plug in the socket.

Thereafter "slide" the Decoder into position and mount it with a screw (2038007) and a fibre washer (0376369).

When installing the Stereo Decoder in the Beomaster 1000 omit one selftapping screw (2012900).

Stereodekoder type 0001
(900H204)
BEOMASTER 1000

FORM. 380 0562898